


INSTALLATION GUIDE

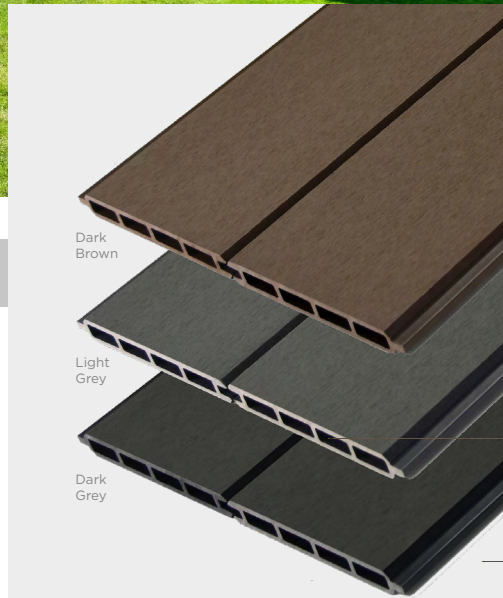

arborfence



READ ALL SECTIONS BEFORE INSTALLATION

These guidelines are intended to direct you through the process of installing your ArborFence products. While we have made every effort to provide as much information as possible, we understand that every project is unique and has specific requirements, so we recommend that you have all designs reviewed by a licensed architect, engineer, or local building official before commencing work. You must make sure your plans are in accordance with UK building regulations prior to beginning any installation work.

SAFETY

As with any construction project, appropriate safety equipment is required when installing ArborFence products. Make sure you wear gloves, safety glasses and a respiratory protection mask, and opt for a top or jacket with long sleeves, plus full-length trousers rather than shorts.

PLANNING AHEAD

Laying out the fence line

Walk the fence line to make sure there are no obstacles or hindrances in the terrain that you will need to take into account. Then stake out the fence line, placing stakes and string next to where you plan to install your fence, taking care to determine the desired location and size of the gates, if using, and marking this along the string line.

Laying out the fence

1. Measure the fence line.
2. Draw a figure of the fence line, including the gate locations(if necessary).
3. It is probable that standard fence sections will not exactly fit the fence layout, so you will have to decide what spacing method to use to accommodate the actual dimensions of the fence line. You can cut each fence section to the same width so that all the sections are equally spaced. Alternatively, install most fence sections as they are supplied, and cut one panel per segment of layout to fit the remaining space.

Measuring up the fence layout

First, measure the fence line, then draw a figure of the fence line, noting the gate locations if necessary. It's unlikely that Arborfence standard fence sections will fit your layout exactly, so you can either choose to cut each fence section to the same width so that all sections are equally spaced, or install mostly complete sections with just one section of fence per segment cut to fit the remaining space. You can decide what works for your project.

Getting materials ready

In order to calculate how much ArborFence material you need for your project, divide the length of each segment of fencing by the width of a standard ArborFence section, and round up to the nearest whole number. We recommend adding an extra 10% onto the total to allow for wastage.

TOOLS REQUIRED



Tape measure



Spirit level



Shovel



Saw





Cement

EXPANSION AND CONTRACTION


As ArborFence planks use natural materials, changes in temperature will lead the fencing sections to expand and contract, especially in extremes of hot and cold. So if you're working in very warm or freezing conditions, ensure you make allowances for this. We recommend fastening your planks as soon as possible after cutting them to size to avoid issues caused by heating and cooling overnight.

PARTS AND ACCESSORIES

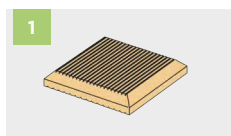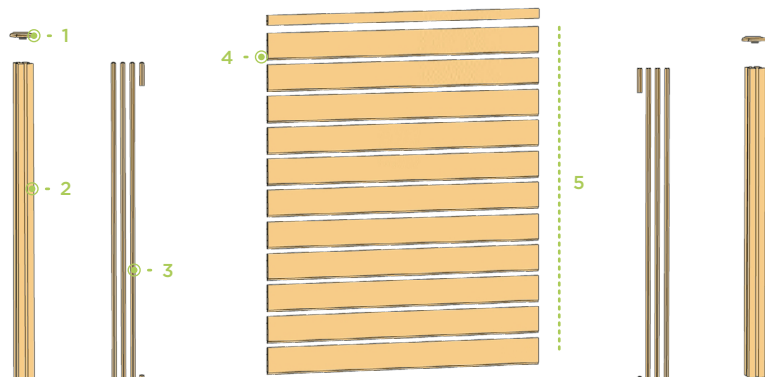

WPC Post Cap

Quantity: 2 pieces
Size: 110 x 110 x 43mm

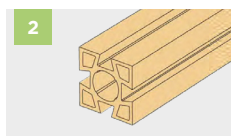


WPC Post

Quantity: 2 pieces
Size: 100 x 100 x 2500mm



WPC Post Strip

Quantity: 8 pieces
Size: 24 x 15 x 2500mm

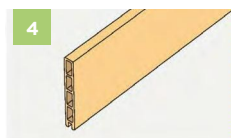

WPC Top Fencing Board

Quantity: 1 piece
Size: 1730 x 150 x 20mm




WPC Fencing Board


Quantity: 11 pieces
Size: 1730 x 160 x 20mm

INSTALLATION INSTRUCTIONS

- 1 The posts should be spaced at 180cm centres. Use a shovel to dig the holes.

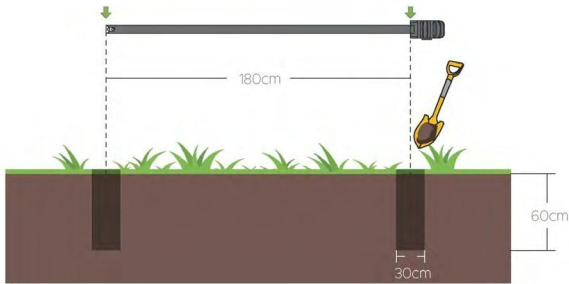

- 2 Insert the posts using a spirit level. Make sure they are completely vertical and straight.


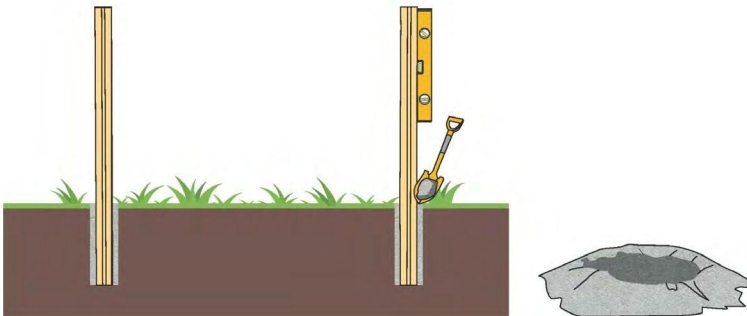


WPC fencing profile:





INSTALLATION INSTRUCTIONS


- 3** Install fencing boards horizontally. Side **A** should be installed upwards.

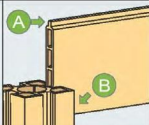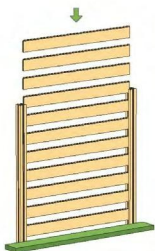


- 4** Install top fencing board.

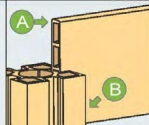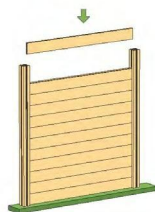

- 5** Install the adjoining post which should be spaced at 180cm centres.

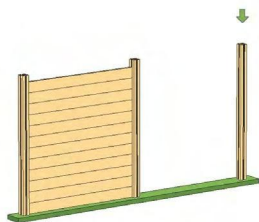

- 6** Install fencing boards and top fencing board as above instructions **3** and **4**.

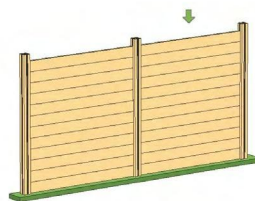


WPC fencing profile:




INSTALLATION INSTRUCTIONS


- 7** Keep installing in line with instructions at 90° corner groove.

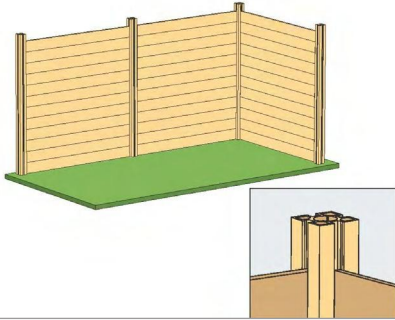


- 8** Insert strips into empty grooves of post.

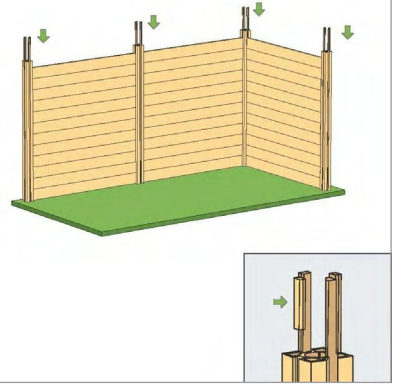

- 9** Place post cap on the post.

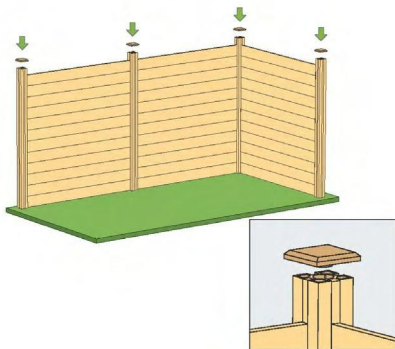


- 10** Finish the installation.

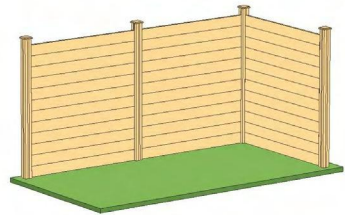

WPC fencing profile:



INSTALLATION GUIDE

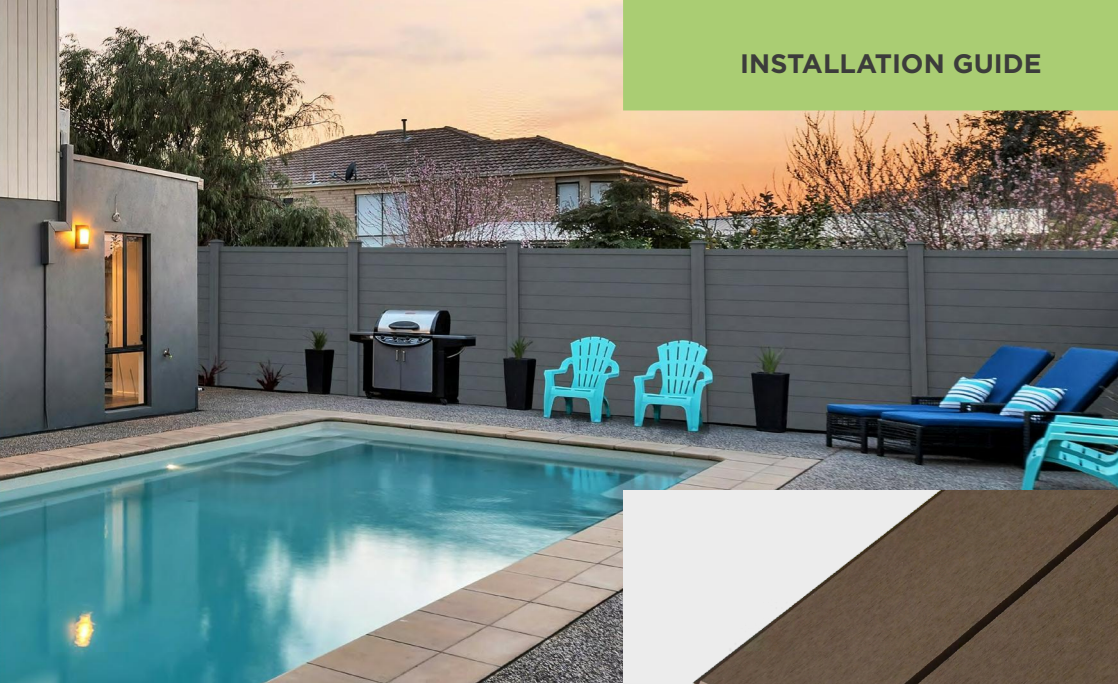

arbor**fence**



Dark
Brown

Light
Grey

Dark
Grey

FOR MORE INFO AND ADVICE:

01469 535 415

trex@arborforestproducts.co.uk

www.arbordeck.co.uk

arbor**fence** by arbor**deck**